If you're standing in the ocean,

body in the water, feet in the sand, are you a peninsula? No, probably not. You're just a human.

This is just a guitar pedal.

It's all just music.

Sounds shift.

Sounds come early, sounds come late. Sounds change frequency and amplitude and our brains start firing. Soothing signals. Cathartic synapses. That's all it is. All it is, all it can be, is standing in the ocean, feet planted in the sand.

DWELLER IS A PHASE REPEATER.

Which means it's a phaser, and a delay, and a lot of stuff in between. Not a combination of the two effects, but a monstrous hybrid capable of immense beauty. If you want a phaser, turn STRETCH all the way down. If you want a delay, turn DEPTH all the way down. What's left is yours to discover.

CONTROLS

RATE controls the rate of the phase shifter - slower speeds counterclockwise, faster speeds clockwise. At minimum the phaser stops moving.

DEPTH controls the depth of the phase shifter - all the way counterclockwise eliminates the shifting entirely, noon has classic deep phaser sounds, and all the way clockwise has otherworldly turns.

REGEN controls the feedback of the circuit. In phaser settings, this means the phaser sound will be more intense and resonant. In delay settings it acts as a feedback control.

MIX controls the blend of the signal. Fully counterclockwise is 100% dry (unaffected) signal, clockwise is 100% wet (affected) signal. At noon there is a 50-50 blend of the two.

EXPRESSION

The Expression jack is used to externally control the STRETCH control. By plugging in an expression pedal, you bypass the knob in order to change the parameter on the fly with your foot or a giant slug.

MODES

THE VOICE SWITCH toggles between two types of phaser: 4 Stage and 8 Stage. Flip it to the left (4 Stage) for a softer vintage sounding phaser. Flip it to the right (8 Stage) for a more complex modern sounding phaser.

THE SHAPE SWITCH toggles between three potential waveforms for the phasing: to the left is a sine wave, in the middle is a triangle wave and to the right is a pseudo-random step wave.

STRETCH controls the overall memory of Dweller. Set fully counterclockwise, it functions as a standard phaser. As you turn it clockwise, the available memory increases, creating stretched out phaser sounds or longer delays if the DEPTH knob is at minimum.

OUTPUT CONTROL

By default, we set our pedals to be at unity gain when engaged. In some scenarios, this can create a perceived drop or boost in volume. To adjust the output level to your setup, remove the backplate and use a small screwdriver to adjust the internal trimpot located in the upper right quadrant of the circuit board (it's blue and is labelled "OUTPUT").








NOTES

			 				 			-	 												 			 		 		-						 		
		•	 	•		•	 	•	•	•	 	•	•	•		•	•	•	•			•		•	•	 	•	 	•	•	•	•			 •	 	•	
٠	-		 				 			-	 							-			-					 		 	•					-		 		
	-		 				 				 							-			-					 		 						-		 		. ,
																																						•
	-		 				 			-	 							-			-					 		 						-		 		
٠	-	•		•	٠			•	•	-			•	•		•	•	-			•	•		•	•	 	٠	 	•	•		•	•		 •	 	٠	
	-		 	٠		٠	 			-	 		٠				٠	-			-			٠	٠		٠	 	٠	-				-	٠	 	٠	
	-		 				 			-	 							-			-		 			 		 						-		 		٠,

OUT OF PHASE WITH THE WORLD

Flourishing echoes dance beneath twinkling high notes of this melody. Regen to taste.

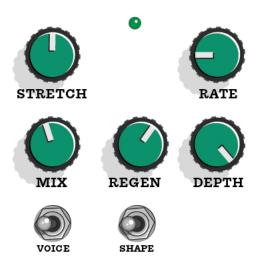

DWELLER WANTS TO TALK TO YOU

Tasteful delay repeats waft along softly, rich and vibey from the 8-Stage phase voicing.



THE RED HERRING

Listen as the random-step brings in chunks and snatches of phase and delay—max out the depth so there's no way to ignore it.

